


# **PU100A Installation and Operating Instructions**

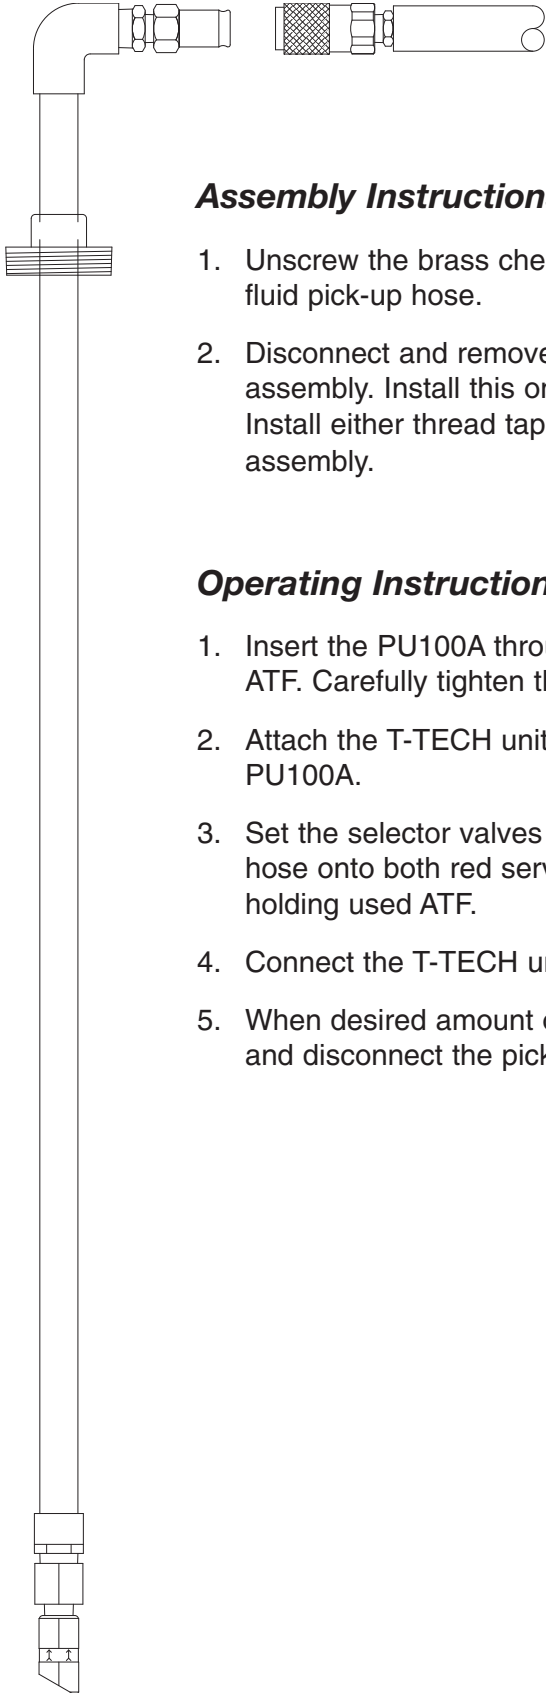

## **Assembly Instructions**

1. Unscrew the brass check valve from fitting at the end of the T-TECH unit's new fluid pick-up hose.
2. Disconnect and remove the dry break female quick coupler from the PU100A assembly. Install this onto the end of the T-TECH unit's new fluid pick-up hose. Install either thread tape or a small amount of thread sealant to fittings prior to assembly.

## **Operating Instructions**

1. Insert the PU100A through the 2" opening into a 16, 30 or 55 gallon drum of new ATF. Carefully tighten the bung adapter into drum to secure.
2. Attach the T-TECH unit's new fluid hose onto the male dry break coupler on PU100A.
3. Set the selector valves to the proper position – Fill Cylinder. Install a clear service hose onto both red service hoses and insert them into a container suitable for holding used ATF.
4. Connect the T-TECH unit to appropriate power source and turn on the fill pump.
5. When desired amount of fluid has been added to the T-TECH unit, turn off pump and disconnect the pick-up hose from the PU100A.